

Vinyl Wall Repair Installation Instructions



1. Begin by removing any surrounding trim pieces (seam covers, baseboards ...). Loose drywall debris is removed, vinyl is cut around the repair area.



2. Apply drywall mesh and compound to a smooth even finish.




3. Select / cut to appropriate size - (52" wide by any length required).



4. Apply new vinyl cover:

- Dry fit vinyl piece to ensure both size and pattern orientation are correct.
- Begin at the top left corner, moving from left to right peeling back several inches of the removable backing.
- Ensure top left corner, centre and top right corner are positioned correctly (plumb and square) before proceeding.
- Apply pressure with cloth or sponge across top to ensure adhesion.
- Continue to pull backing downwards; apply pressure working from the centre outward.
- Continue moving downwards finishing in bottom left or right corner.

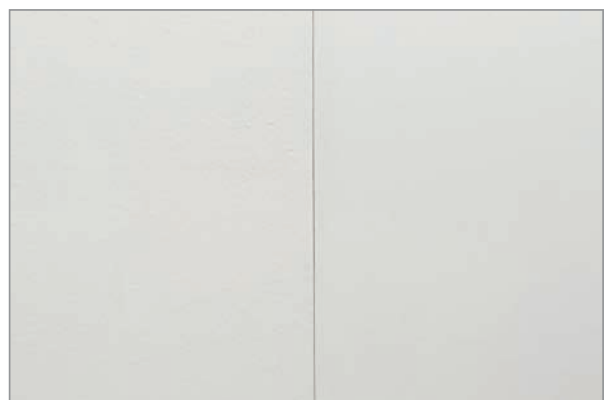

5. Completed repair, identical to adjacent panel.